



www.smartsaver.ru

User's Manual

IOS / Android




smartsaver.ru/download

App installation

Scan the QR code with the camera of your mobile device or download the app from Google Play or Apple Store (search for «Smart Saver»). Register in the app.

SAVER smart plug

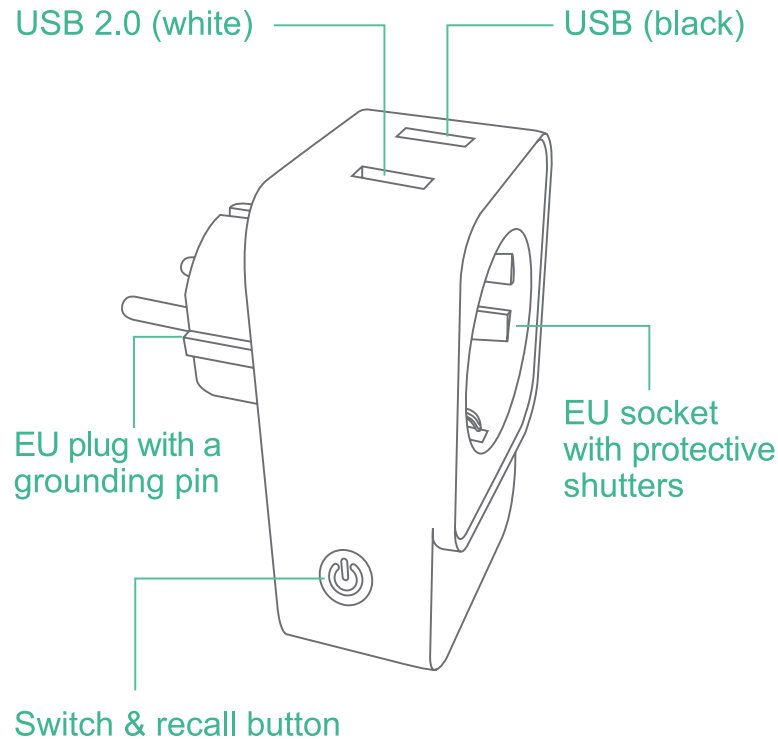

- Short press to switch on/off the appliance, powered through SAVER
- Press and hold for 5 seconds to restore default settings

Indication



The indicator is glowing red
The device connected to SAVER is powered on



The indicator is off
The device connected to SAVER is powered off



The indicator is glowing blue
SAVER has just been connected to the mains (wait for about 15 seconds)



The indicator is slowly flashing
SAVER is waiting to be configured (see Connecting to the Wi-Fi network)

Restoring default settings

If the indicator is not flashing during configuration, or reconfiguration is required, press and hold the switch button for about 5 seconds to restore the default settings and wait for 30 seconds until the indicator starts flashing slowly.

SAVER features



Mains voltage and power consumption measuring



30-day voltage statistics graphs



Remote switching of appliances via a mobile app



Protection of appliances: automatic power cutoff in the case of overvoltage or overload



Wi-Fi coverage expansion



Energy supply on/off on timer or schedule



Creating scenes for controlling your home using plug-ins

Connecting to the Wi-Fi network

- Connect SAVER to the mains: the indicator will light up and stay on, glowing blue; wait for 30 seconds
- When the indicator starts flashing slowly, it means that the device has been activated and is ready for configuration
- Connect to your Wi-Fi network on your mobile device
- Open Smart Saver app
- Tap the «+» button at the top of the screen
- Make sure that the indicator is slowly flashing and tap the «next» button
- Enter the Wi-Fi network password and tap the «✓» button to start configuration
- The indicator will start flashing rapidly and then go out, indicating that the device has been configured successfully

App guide



Tap the icon to go to the SAVER or plug-in control screen



Touch and hold the SAVER icon to switch the connected device on/off



Icon delete/move mode



Smart home scene creation and control



Store page (smartsaver.ru/store)



Account settings, user preferences saving and loading



Drag the screen downwards to refresh


Plug-in activation guide

- Open Smart Saver app on your mobile device
- Insert the plug-in into the corresponding USB port
- The plug-in icon will appear on the home screen within 10 seconds




NOTICE

Plug-ins with a black USB plug must be connected to the black USB port. Plug-ins with a white USB plug must be connected to the white USB port.

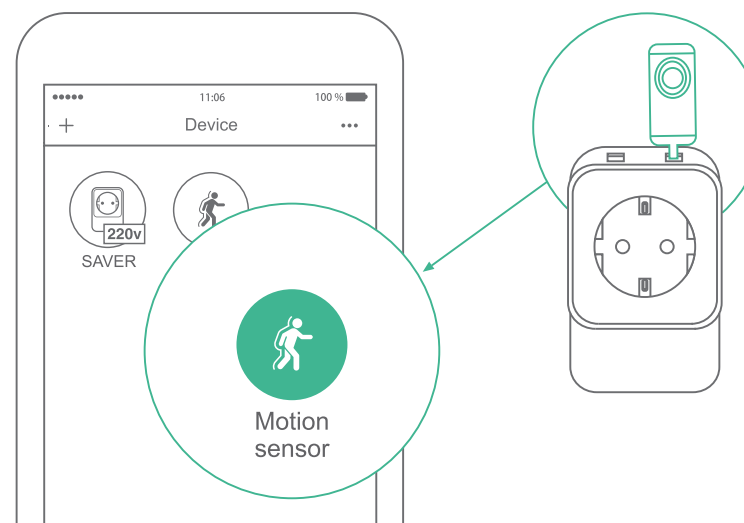

SAVER plug-in features

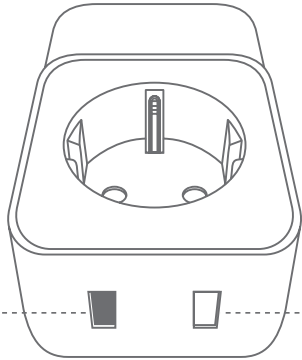

USB (black)

► **IR plug-in:**

can be used instead of various IR remote controls to control most of the modern appliances

► **Motion sensor:**

is triggered by motion

Door sensor:

is triggered when a door or window is opened or closed; the door sensor is controlled through the RF plug-in

USB 2.0 (white)

◀ **Environmental sensor:**


measures temperature, humidity, and illumination

◀ **RF plug-in:**

device control via a 433,92 MHz wireless channel

◀ **Mobile device charging**

Scene creation

- Tap the «+» button on the scene screen 
- Select a scene execution condition
- Add the device to respond (SAVER or remote controls for appliances)
- To delay scene execution, add a time interval
- To remove a scene, swipe it to the left
- To edit a scene, touch and hold it

Smart home scene examples

$t < 5^{\circ}\text{C}$	→	heater turns on
8:00	→	floor lamp turns on
23:00	→	thermo pot turns off
Motion	→	light turns on

Product parameters

Product name SAVER smart plug

Product dimensions 57x71,5x92 mm

Voltage 100~260 V 50/60 Hz

Max current 10 A

Max power 2200 W

Wi-Fi standard 802.11b/g/n

Wi-Fi enhancement 18 dBm

Housing polycarbonate, IP 00

Ambient temperature from +5 to +40° C



CAUTION

Exceeding the 10A current or 2200W power threshold can cause short circuit and even fire

Warranty and technical support

If you require any further assistance with SAVER, please visit smartsaver.ru/support or contact us in the following ways:

Hotline:

+7 495 517 75 81

Skype:

Smartsaver Support

E-mail:

support@smartsaver.ru

Service center:

56/40 Sevastopolsky Avenue, Moscow, Russia

Manufacturer:

Designed by ORTEA LLC

Assembled in China

For detailed device information, please visit www.smartsaver.ru

The product is covered by warranty for 1 year from the purchase date. For detailed information about the warranty terms, please visit smartsaver.ru/service